

## ПУЛЬТ SONY RM-191A (УНИВЕРСАЛЬНЫЙ)



Рейтинг: Пока без рейтинга

**Цена**

[Задайте вопрос по этому товару](#)

Данный пульт заменяет следующие пульты Sony:

- |     |     |     |
|-----|-----|-----|
| • R | • R | • R |
| M-  | M-  | M-  |
| 65  | 84  | 94  |
| 6A  | 9S  | 6   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 67  | 84  | 95  |
| 7   | 9T  | 2   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 67  | 85  | 95  |
| 7C  | 7   | 3   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 68  | 85  | 95  |
| 1   | 7A  | 4   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 68  | 85  | 95  |
| 7   | 8   | 5   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 68  | 85  | 95  |
| 7C  | 9   | 6   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 76  | 86  | 96  |
| 8   | 1   | 1   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 79  | 86  | 96  |
| 1   | 2   | 3   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 81  | 86  | 96  |
| 6   | 9   | 9   |
| • R | • R | • R |
| M-  | M-  | M-  |
| 81  | 87  | 97  |
| 7   | 0   | 2   |
| • R | • R | • R |

M-821	M-871	M-991
• R	• R	• R
M-826	M-873	M-992
• R	• R	• R
M-827B	M-878	M-993
• R	• R	• R
M-827C	M-881	M-99W10
• R	• R	• R
M-827S	M-883	M-99W10
• R	• R	• R
M-827T	M-887	M-99W10
• R	• R	• R
M-830	M-889	M-99W10
• R	• R	• R
M-831	M-890	M-99Y101
• R	• R	• R
M-832	M-891	M-99Y116
• R	• R	• R
M-833	M-892	M-99Y145
• R	• R	• R
M-834	M-893	M-99Y145
• R	• R	• R
M-836	M-916	M-99Y146
• R	• R	• R
M-837	M-921	M-99Y172
• R	• R	• R
M-838	M-933	M-99Y173
• R	• R	• R
M-839	M-936	M-99Y183
• R	• R	• R
M-841	M-938	M-99G
• R	• R	• R
M-842	M-940	M-9920
• R	• R	• R
M-	M-	M-92

84	94	• R
5P	3	M-
• R	• R	29
M-	M-	10
84	94	• R
5S	5	M-
		29
		18